



Quantum70

User Guide



SecureWave
868MHz Radio

Safe & Secure

www.hkc.ie

Security

Installer _____
Address _____

Tel: _____ Fax: _____

After Hours: _____

Date: _____

Alarm Centre (Technistore)

Tel: _____

Note1: Always use HKC replacement batteries

Note2: Please refer to RKP inner flap label for more details of Quick Codes, Inhibits and Audio Memo-Pad operation.

WARNING


While this system has been designed to the highest standards it does not offer guaranteed protection against burglary or fire. Any alarm system is subject to compromise or failure to activate for a variety of reasons. Therefore, good installation practices and regular maintenance are essential to ensure continuous satisfactory operation of the system. The transmission of text messages is dependent on the SMS service provider. HKC Ltd. cannot guarantee successful messaging. Messages which remain undelivered when the validity period expires are discarded. The validity period is the time the message is submitted plus 12 hours.

COPYRIGHT

© HKC Ltd. All Rights reserved. No part of this publication may be reproduced, transmitted, stored in a retrieval system or translated in another language in any form or by any means - electronic, mechanical or otherwise without the prior written permission of HKC Ltd.

 
DISCLAIMER

HKC Ltd. makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Further, HKC Ltd. reserve the right to revise this publication and to make changes from time to time in the contents hereof without obligation of HKC Ltd. to notify any person of such revision.


 This marking certifies that this product has been tested in a representative system complying with the requirements laid down in Electromagnetic Compatibility directive 89/336/EEC and Low Voltage Directive 72/23/EEC and subsequent modifications.

USER MENU

Press  followed by the User Code. The first User Menu item is...

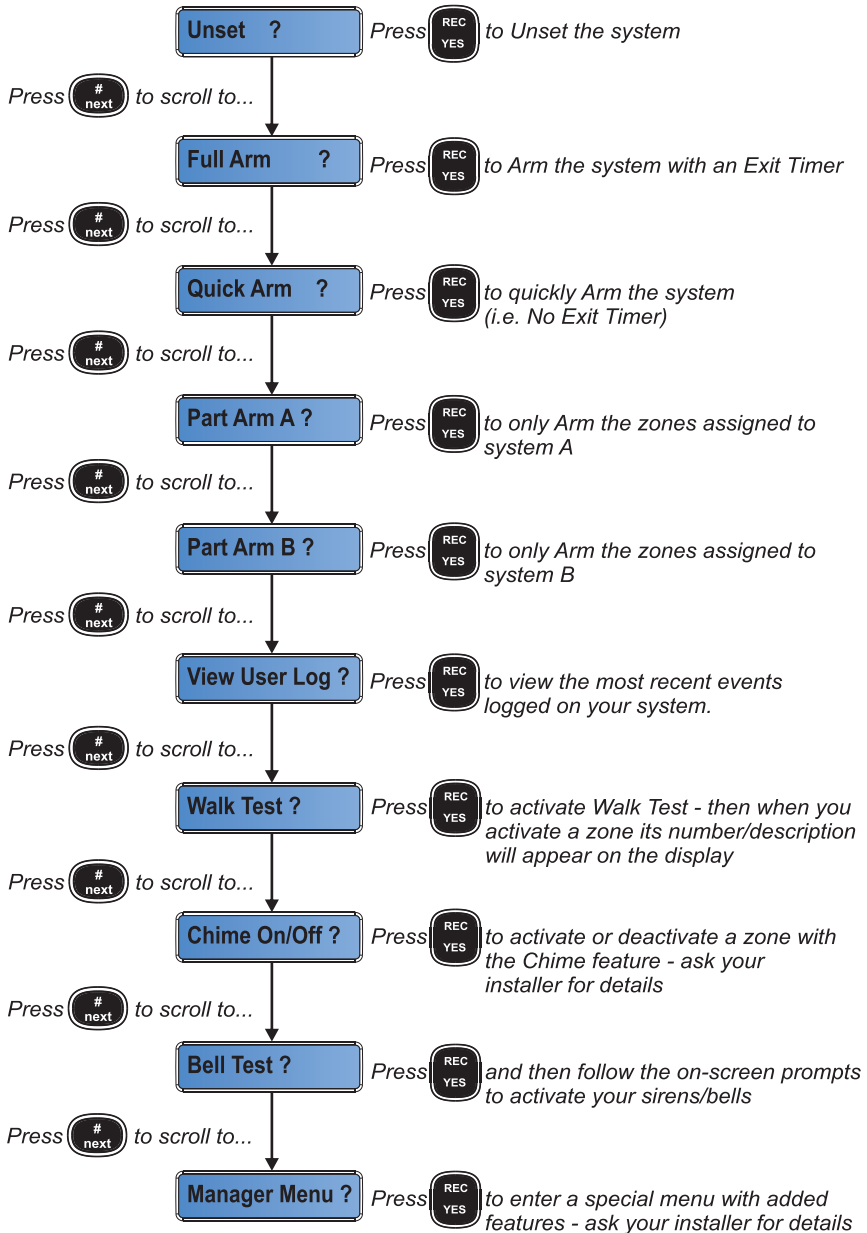

MANAGER MENU

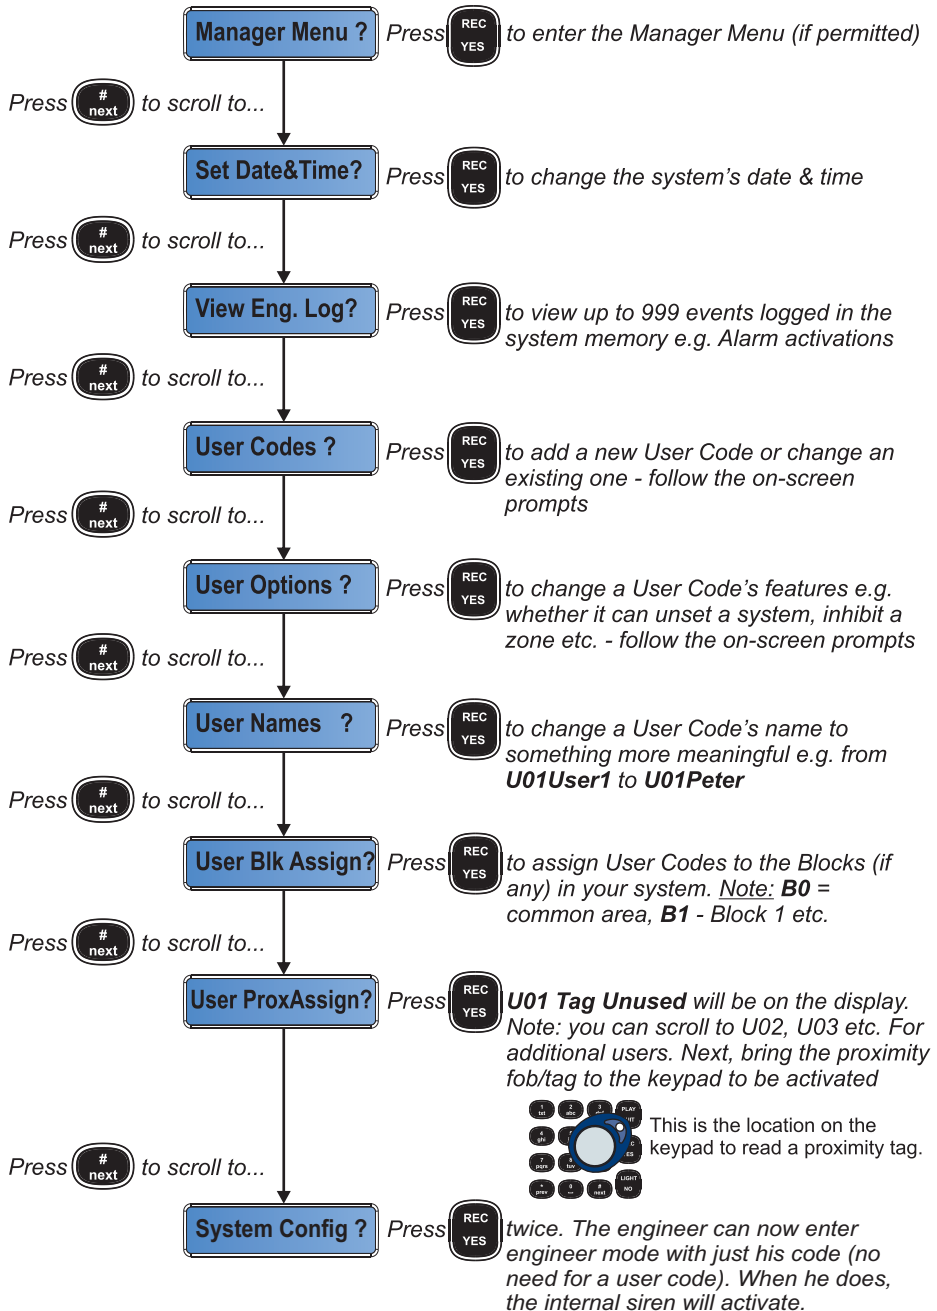 


Your system may be programmed to work without a User Menu. In which case...

FULL SET With Exit Timer

Press  followed by User Code
OR if allowed...

 Press    User Code*

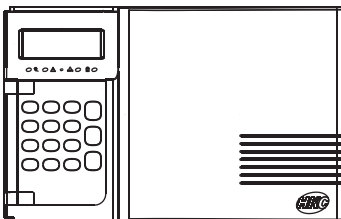

SYSTEM
ARMING

 
Buzzer sounds for length of exit time

Keypad displays exit time remaining



FULL SET Without Exit Timer

Press    User Code*

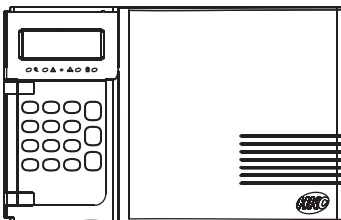

SYSTEM
ARMING

Keypad displays....

 
System Arming

* *Quick Code with User Code is EN 50131 requirement*

SYSTEM UNSET

To unset the system or cancel an alarm

Press  followed by User Code

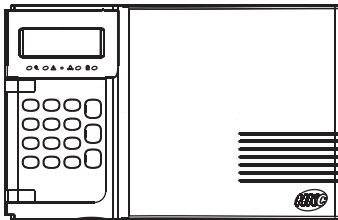

SYSTEM
UNSET

Note: If there was an alarm activation then the keypad will make an announcement.

You can terminate this by pressing 

 
PART SET A

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*

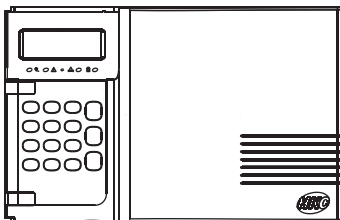

SYSTEM
ARMING

Keypad displays....

System Arming

 
PART SET B

Partial arming of the system

Part set will automatically inhibit the following zones

_____/_____
_____/_____

Press    User Code*

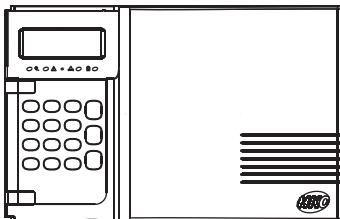

SYSTEM
ARMING

Keypad displays....

System Arming

NOTES: Zones inhibited in Part Set will remain inactive for the duration of system set.

* *Quick Code with User Code is EN 50131 requirement*

ZONE INHIBIT



CAUTION

Zones inhibited will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example 1: To Inhibit Zone 5

Press User Code

Keypad displays...



System will now set with Zone 5 inhibited

It is possible to inhibit a number of zones as shown below.

Example 2: To inhibit zones 5 & 3

Press User Code

NOTE: System will set in normal manner

 
FORCED ARMING



CAUTION

Zones inhibited by forced arming will remain inactive for the duration of the system set. This feature should be used with caution having first identified the reason for the zone condition.

Example: Zones 3, 4, 5 & 7 are open



Press User Code

System will now set with Zones 3,4,5 and 7 automatically inhibited for the duration of the system set.

REMOTE RESET

Your system may be programmed to trigger a remote reset after a confirmed alarm activation. In which case follow the instructions below...

Press  followed by the User Code. The first User Menu item is...

Unset ?

Press  to Unset the system

After the system announces the alarm events the following appears on the display...

Quote Code nnnnn

Where **nnnnn** is a five-digit number



Call Alarm Centr

Phone the Call Centre number on the inside cover

When you contact the Call Centre give them the five-digit number. They, in return, will give you a different five-digit number. Use this to reset the system.

Note: you will need to reset the system otherwise you will not be able to arm it

When you try to arm the system you will see the following...

Reset Code:-----

Simply key-in the five-digit number given to you by the call centre. You will then see...

System Reset OK

 
You are now free to continue arming your system

RF-KEYFOB

If your system has an RF-Keyfob please note the following.

RF-Keyfob in Quick Key mode

Green:- Transmission OK, Red: Transmission not OK, Orange:- Out of range

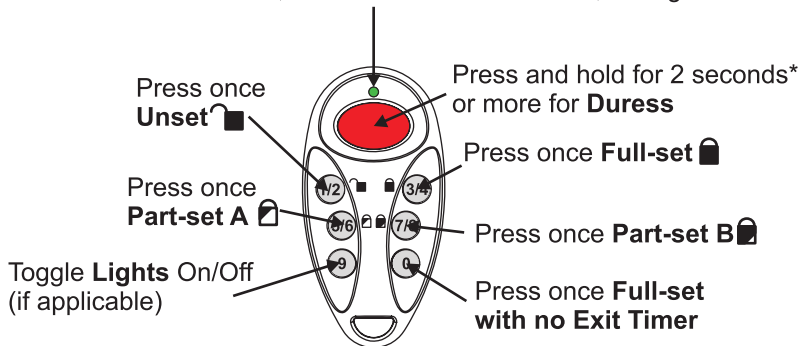

**This time is programmable - ask your installers for details*

Normally the RF-Keyfob works in “Quick Key” mode. However, you may ask your installer to set it up for “Secure Unset” mode.

In “Secure Unset” mode, to unset the system or to cancel an alarm press ① followed by User Code.

Also in “Secure Unset” mode;

Press  for **Full Set**

Press  for **Part-set A**

Press  for **Part-set B**

Press ⑨ to toggles **Lights** On/Off (if applicable)

Note: Always make sure you get a green “transmission OK” light otherwise you will have to repeat your key-press.

Zone & Point Details

Z1		Z36		P01	
Z2		Z37		P02	
Z3		Z38		P03	
Z4		Z39		P04	
Z5		Z40		P05	
Z6		Z41		P06	
Z7		Z42		P07	
Z8		Z43		P08	
Z9		Z44		P09	
Z10		Z45		P10	
Z11		Z46			
Z12		Z47			
Z13		Z48			
Z14		Z49			
Z15		Z50			
Z16		Z51			
Z17		Z52			
Z18		Z53			
Z19		Z54			
Z20		Z54			
Z21		Z56			
Z22		Z57			
Z23		Z58			
Z24		Z59			
Z25		Z60			
Z26		Z61			
Z27		Z62			
Z28		Z63			
Z29		Z64			
Z30		Z65			
Z31		Z66			
Z32		Z67			
Z33		Z68			
Z34		Z69			
Z35		Z70			



Thank you for considering HKC products
for your security system.

For further information in relation to
any of our products, please contact us at:

HKC Ltd.

Parkway Business Centre, Ballymount,
Dublin 24, Ireland.

T: 353 1 456 7007

F: 353 1 456 8332

E: sales@hkc.ie

or visit us at www.hkc.ie